



Digital Interface Pwr Supply
 VOLTAGE=5V
 REFERENCE=0V
 PWR_NODE= 5V
 GND_NODE= AGND
 DIGIFPWR

IBTK Ingenieurbüro
 Dipl.-Ing. Timo Kirschke
 Roßmählerstraße 15
 01705 Freital

Tel./Fax: 0351-4600620 A4

PWM_Ums1

Revision: 2.0 25.6.1996 1 / 1