



Digital Interface Pwr Supply
 VOLTAGE=5V
 REFERENCE=0V
 PWR_NODE= 5V
 GND_NODE= AGND

DIGIFPWR

IBTK Timo Kirschke
 Roßmäßlerstraße 15
 01705 Freital
 0351-460 0620

Format: A4

ClassD_generator1.sch

Version: 1.0 09.01.2004 page 1 of 1